



#81991 (116.606.AB.1)


CHICAGO FAUCET E-TRONIC SOLENOID CHART

1st Generation

White Plastic Valve Body with
 White Solenoid and Black Bonnet

Sold between March 2008 and November 2013

- STEP 1: Unplug solenoid wire connector
- STEP 2: Remove bonnet retainer screws and retainer
- STEP 3: Using pliers, pull up to remove solenoid

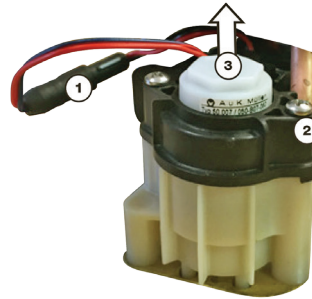


#69551

2nd Generation

White Plastic Valve Body with
 Black Solenoid and White Bonnet

Sold between November 2013 and December 2016

- STEP 1: Unplug solenoid wire connector
- STEP 2: Remove bonnet retainer screws
- STEP 3: Using pliers, pull up to remove retainer and solenoid

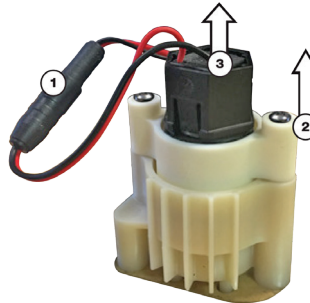


#69551

3rd Generation

Brown Plastic Valve Body with Black Solenoid
Sold from December 2016 to present

- Shut off water supply and remove spout
- STEP 1: Unplug solenoid wire connector
 - STEP 2: Use a 17mm socket to loosen solenoid
 - STEP 3: Unscrew and remove solenoid

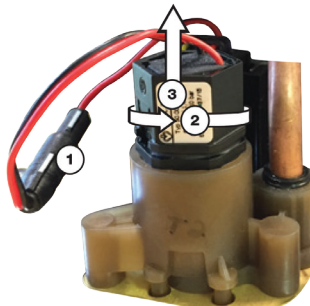

#67261